


- 1 ECOLINE ADH fleeceback
single ply membrane fully bonded
using ADH Adhesive
- 2 Hytherm tapered/flat board Insulation
mechanically fixed with Ecoline insulation
washers and fixings (thickness to achieve
design U-value and/or design fall)
- 3 Preformed PVC membrane flange
- 4 Heat welded seam to field membrane
- 5 ECOLINE Tubular Washer and
mechanical fastener (MTP) fixing
- 6 Axter prefabricated vent pipe
- 7 Vent pipe by specialist contractor
- 8 Galvanised metal sleeve flashing
mechanically fixed and sealed at perimeter
(by specialist subcontractor)
- 9 Vernis Antac ST primer
- 10 Axter Vapour Control Layer
- 11 Plywood substrate
(by specialist subcontractor)
- 12 ADH Adhesive

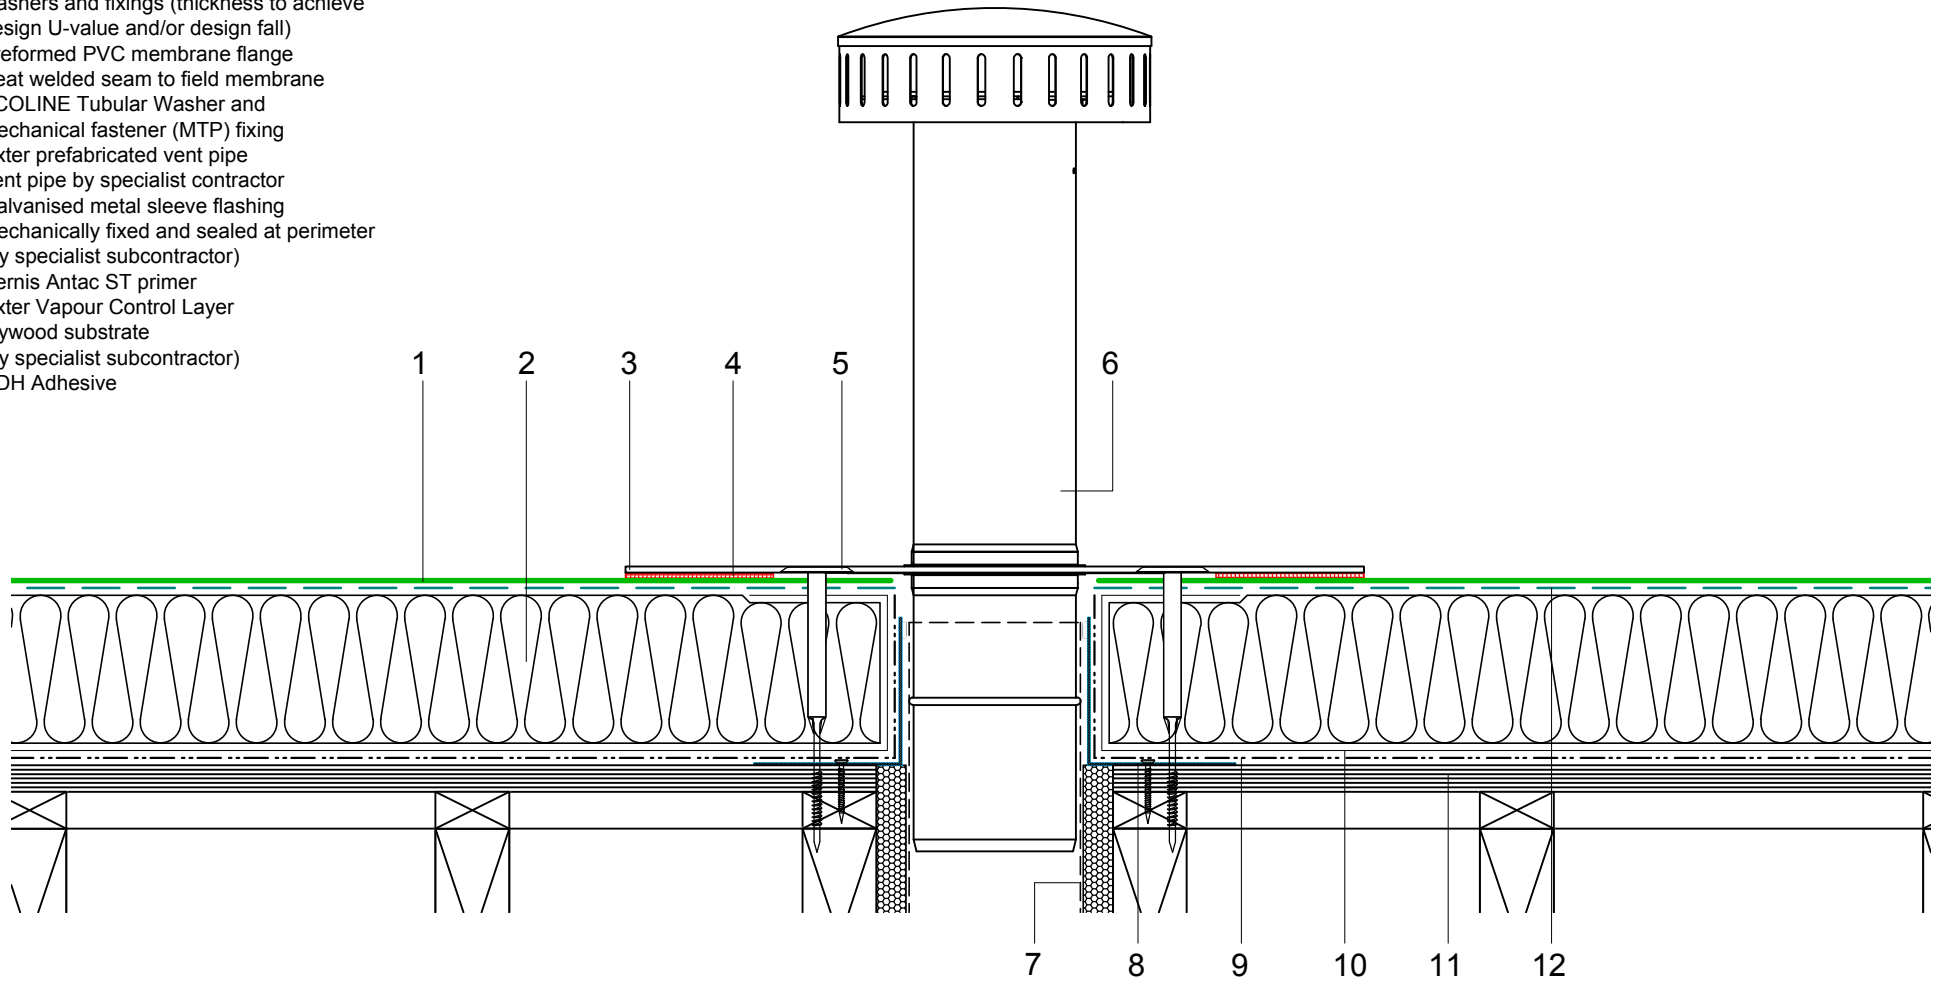

Do Not Scale. All dimensions to be checked on site by the Axtersfield Installer

Axter provide detail drawings as part of our technical design service. Such drawings should only be used as a guide during the design process and should not be utilised during construction. Axter accepts no liability for misuse of this service.

PROJECT	AXTER - STANDARD DETAIL
CLIENT	N/A

DRAWING	AXTER WARM ROOF - ECOLINE ADH SYSTEM TYPICAL SVP PENETRATION DETAIL (WITH INTERGRAL FLANGE - PLYWOOD SUBSTRATE			
DWG.No	SCALE	DATE	REV	
WR.P.EL.adh.92	1:5 @ A4	10.16	N/A	



www.axter.co.uk
info@axterltd.co.uk
01473 724 056

Axter Ltd,
West Road, Ransomes Europark,
Ipswich, Suffolk, IP3 9SX